



W1 ELECTRICAL SCHEMATIC - KOHLER ENGINE (S/N 035001-)

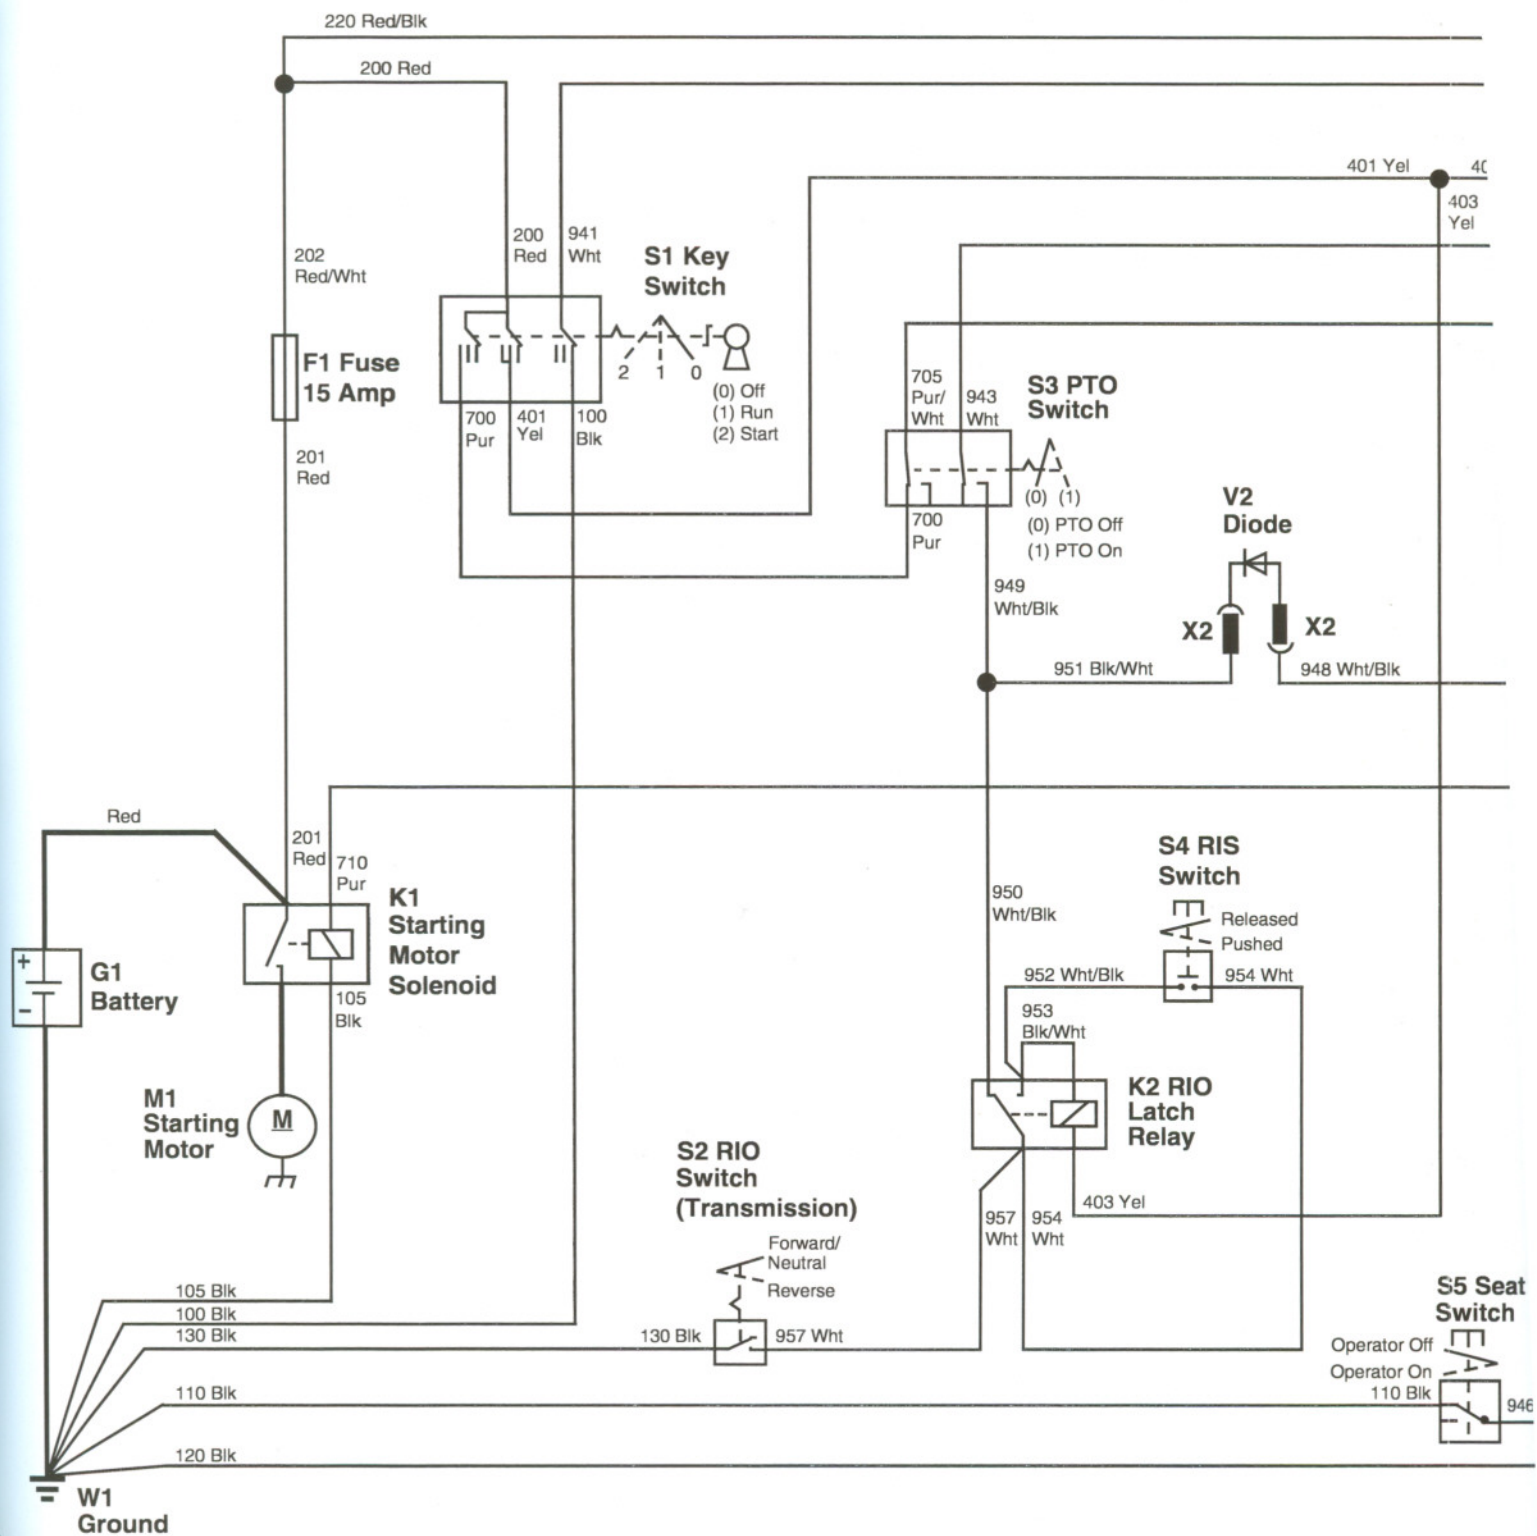

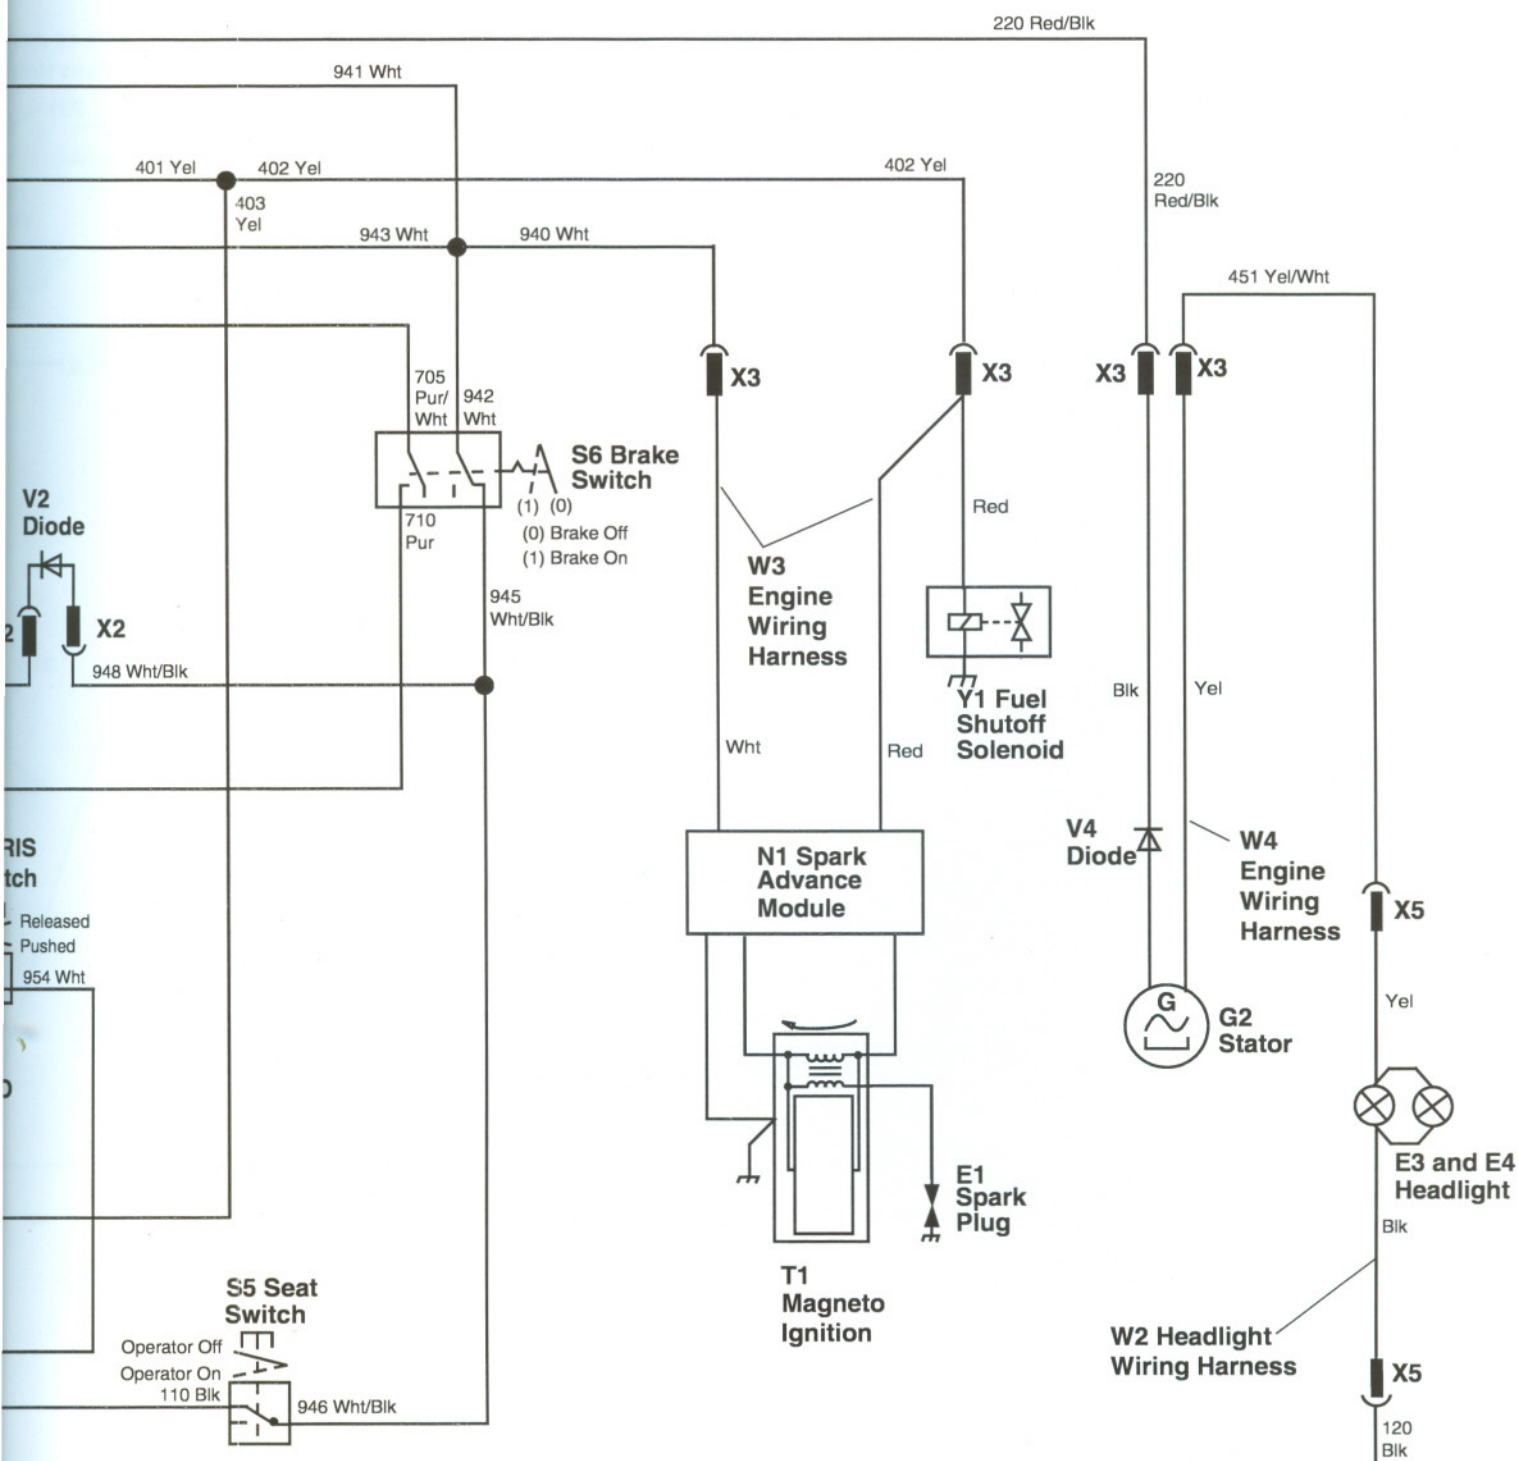

- MAGNETO KILL & START INTERLOCK


SE 3 - ENGINE


SE 4 - CHARGING

SE 5 - HEADLIGHTS

W1 WIRING HARNESS - KOHLER ENGINE (S/N 035001-)


Circuit No.	Wire Size	Color	Connection Point
100	0.5	Blk	S1, W1
105	0.5	Blk	K1, W1
110	0.5	Blk	S5, W1
120	0.5	Blk	X4, W1
130	0.5	Blk	S2, W1
200	0.8	Red	Splice 202/220, S1
201	0.8	Red	K1, F1
202	0.8	Red/Wht	F1, Splice 200/220
220	0.8	Red/Blk	Splice 200/202, X2
401	0.5	Yel	S1, Splice 402/403
402	0.5	Yel	Splice 401/403, X2
403	0.5	Yel	Splice 401/402, K2
451	0.5	Yel/Wht	X2, X4
700	0.5	Pur	S1, S3
705	0.5	Pur/Wht	S3, S6
710	0.5	Pur	S6, K1
940	0.5	Wht	Splice 941/942/943, X2
941	0.5	Wht	Splice 940/942/943, S1
942	0.5	Wht	Splice 940/941/943, S6
943	0.5	Wht	Splice 940/941/942, S3
945	0.5	Wht/Blk	Splice 946/948, S6
946	0.5	Wht/Blk	Splice 945/948, S5
948	0.5	Wht/Blk	Splice 945/946, X2
949	0.5	Wht/Blk	Splice 950/951, S3
950	0.5	Wht/Blk	Splice 949/951, K2
951	0.5	Blk/Wht	Splice 949/950, X2
952	0.5	Wht/Blk	S4, K2
953	0.5	Blk/Wht	K2, K2
954	0.5	Wht	S4, K2
957	0.5	Wht	K2, S2

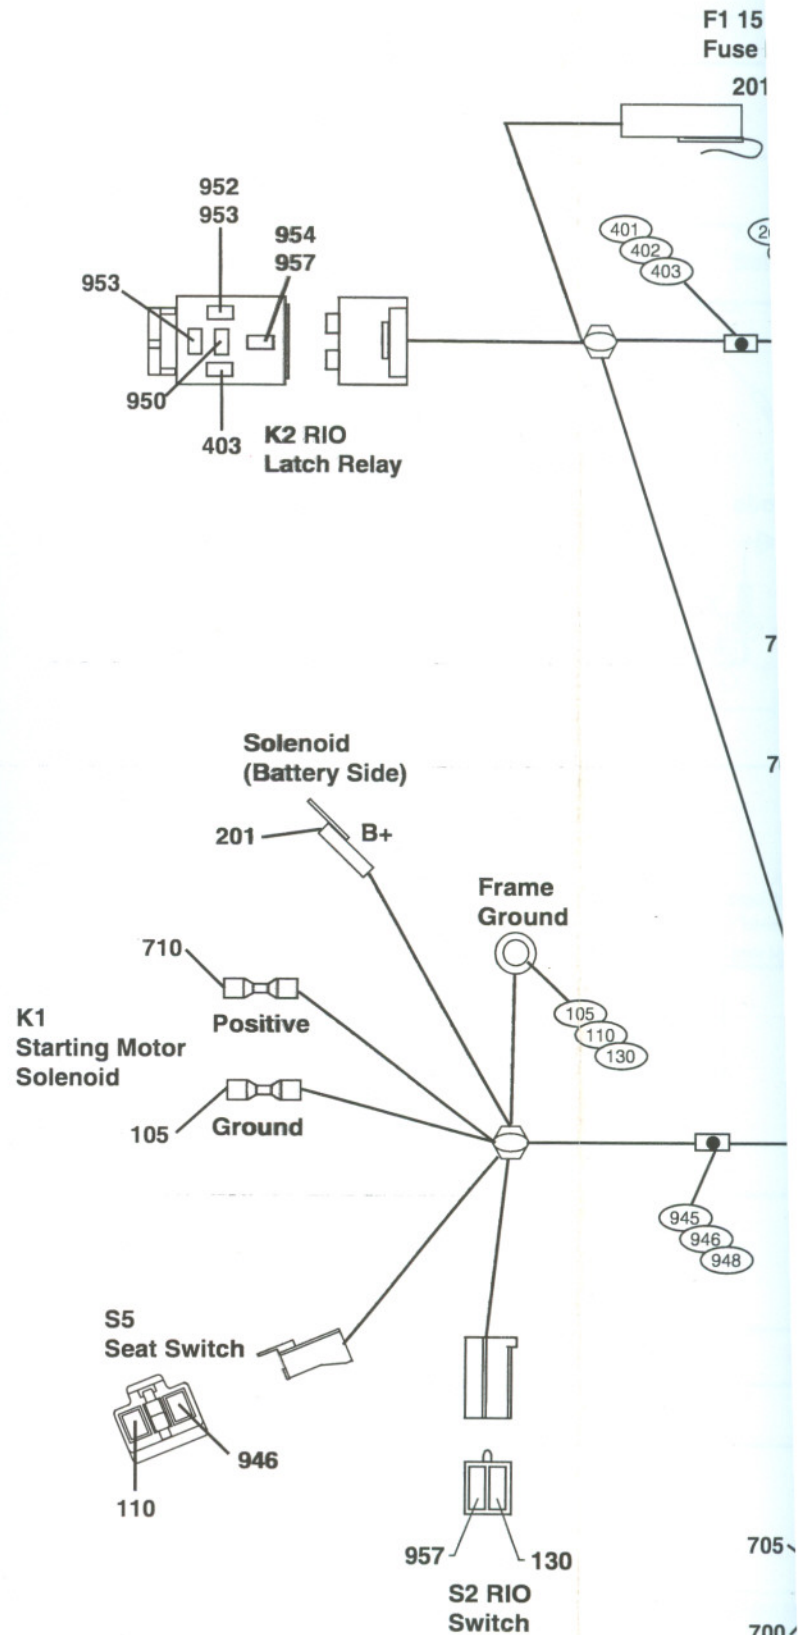

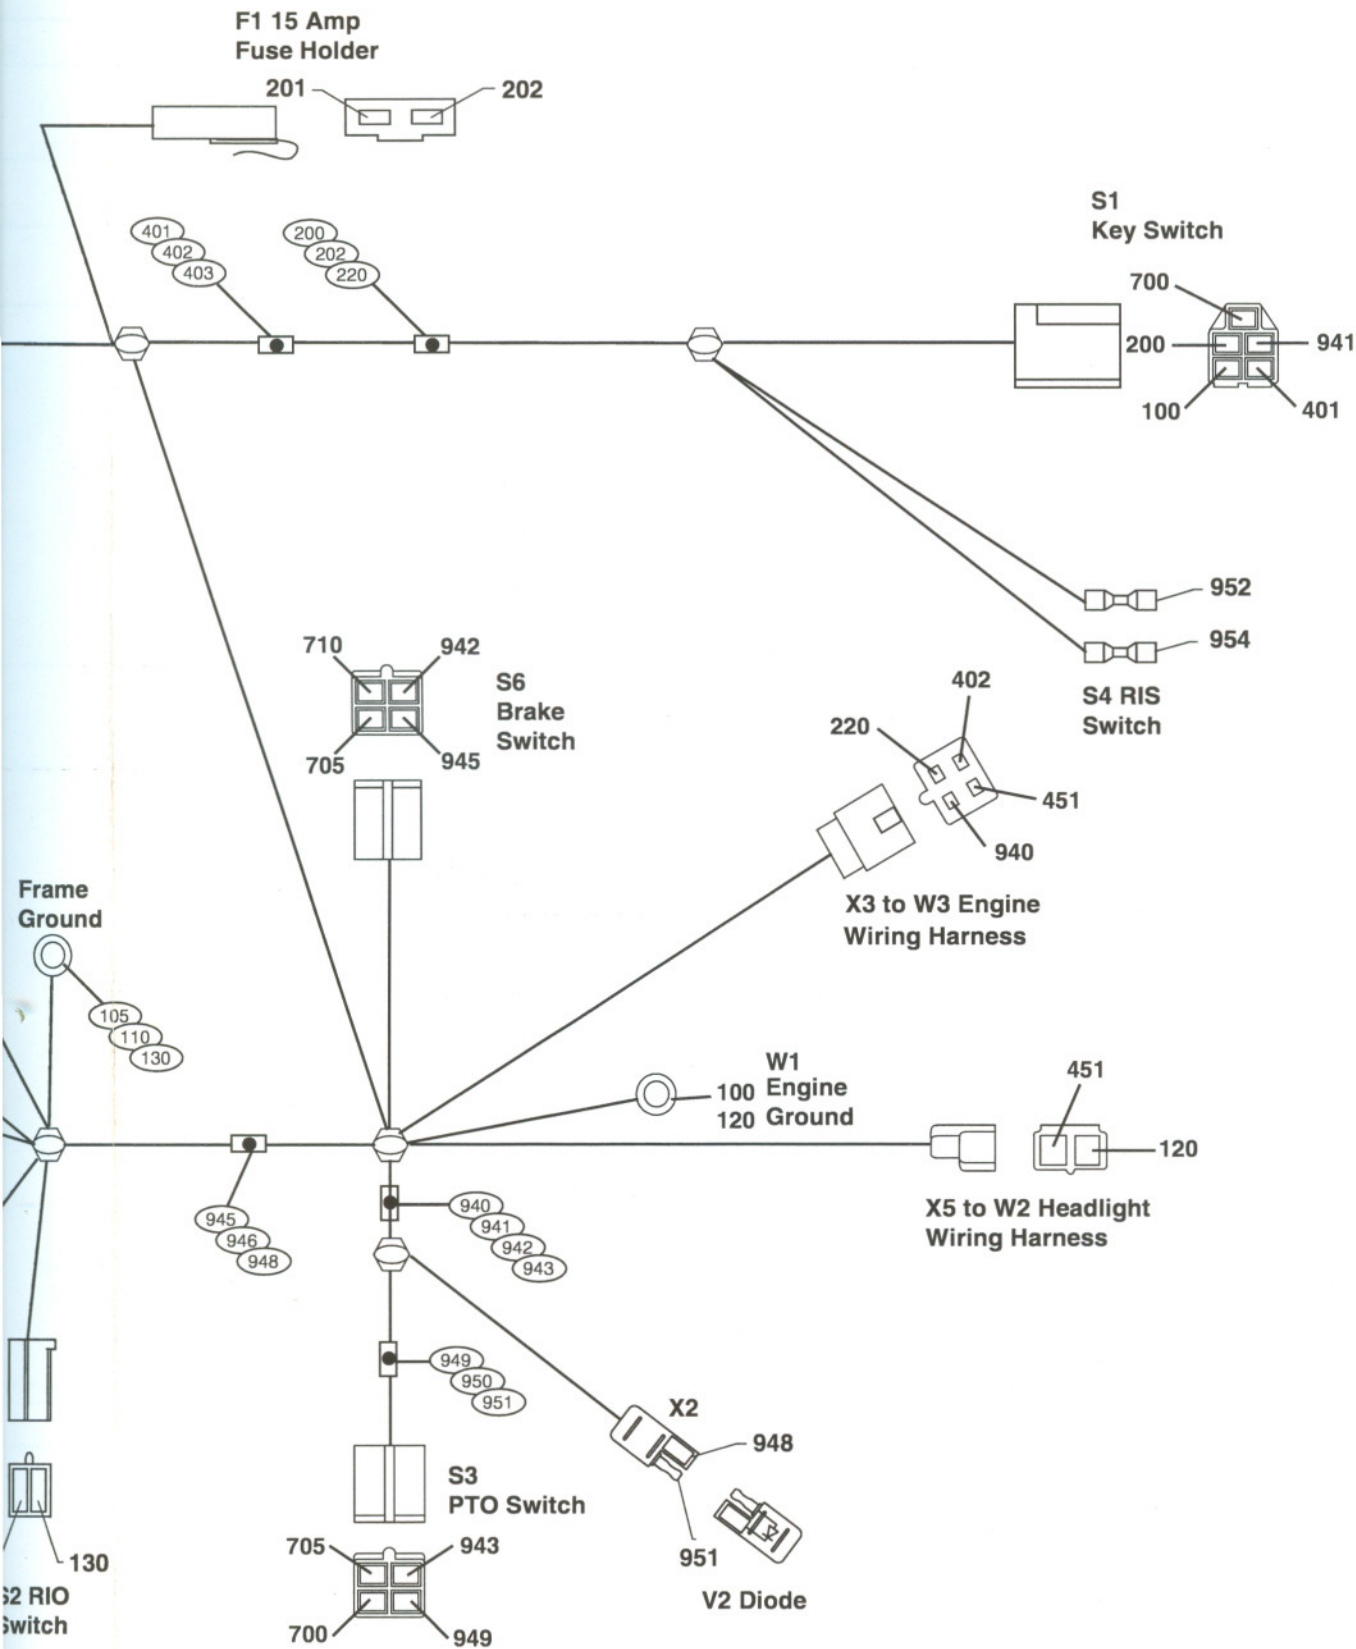


WIRING HARNESSSES


W2 HEADLIGHT WIRING HARNESS

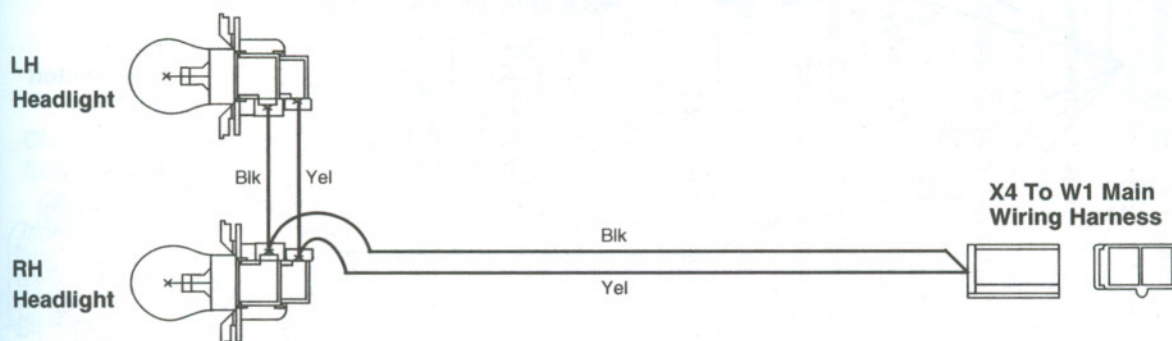

W3 ENGINE WIRING HARNESS (Briggs & Stratton)

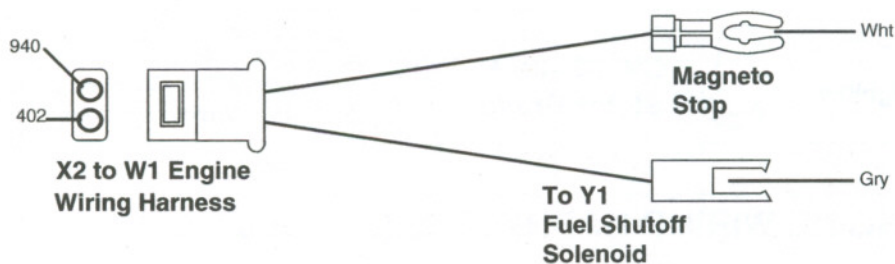


W4 ENGINE STATOR WIRING HARNESS (Briggs & Stratton)

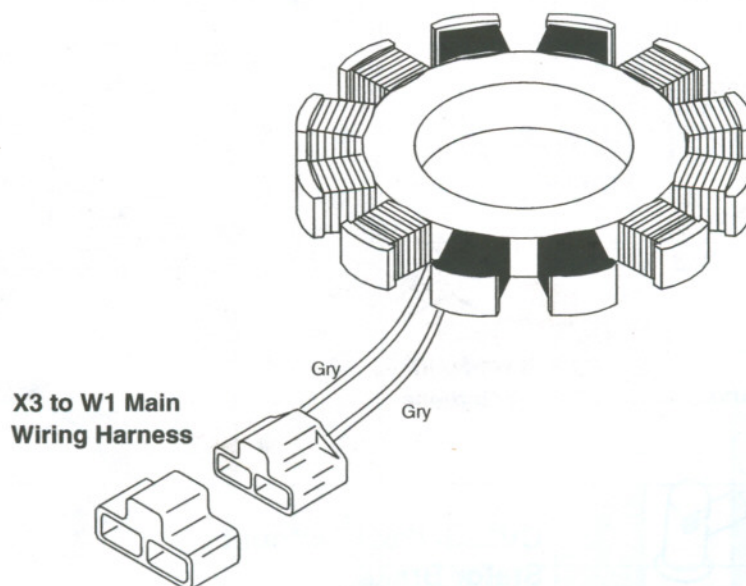


Y1 FUEL SHUTOFF SOLENOID (Briggs & Stratton)



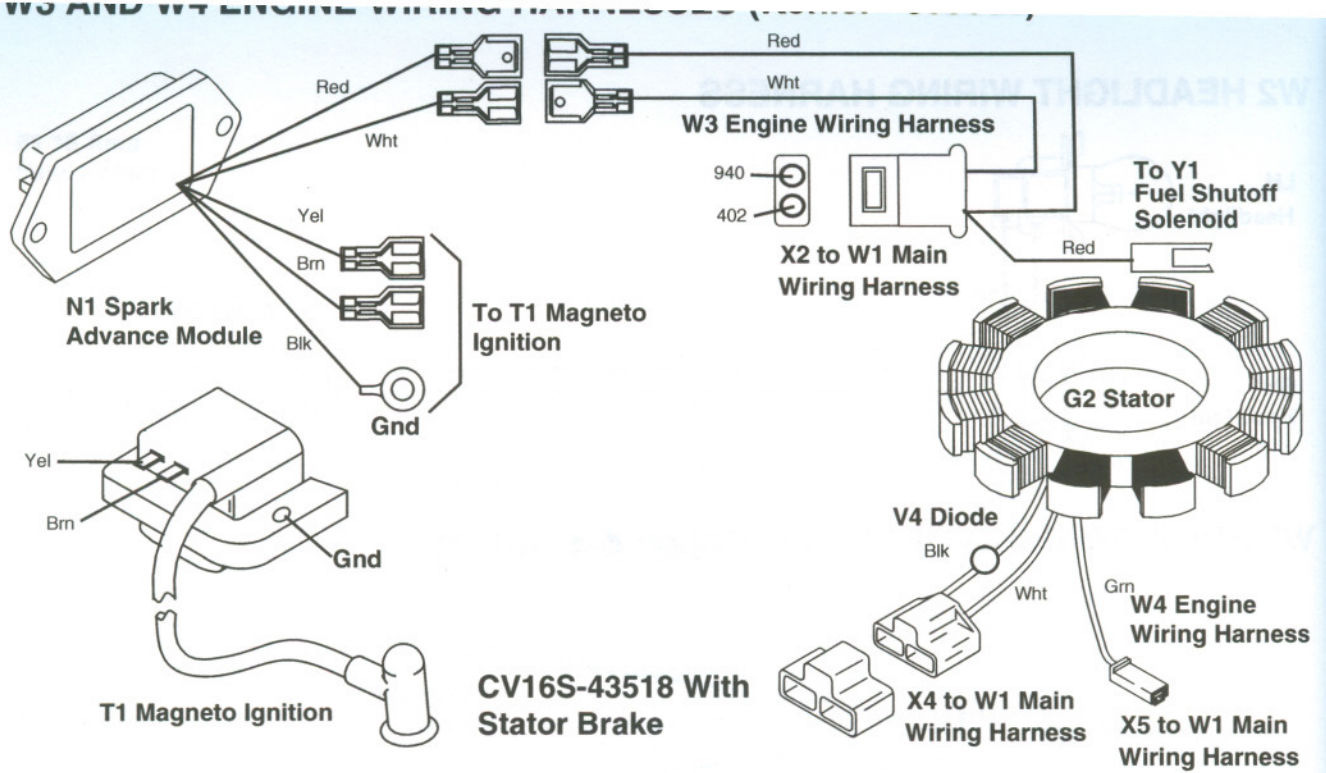

W3 AND W4 ENGINE WIRING HARNESSSES (Kohler 035001-)

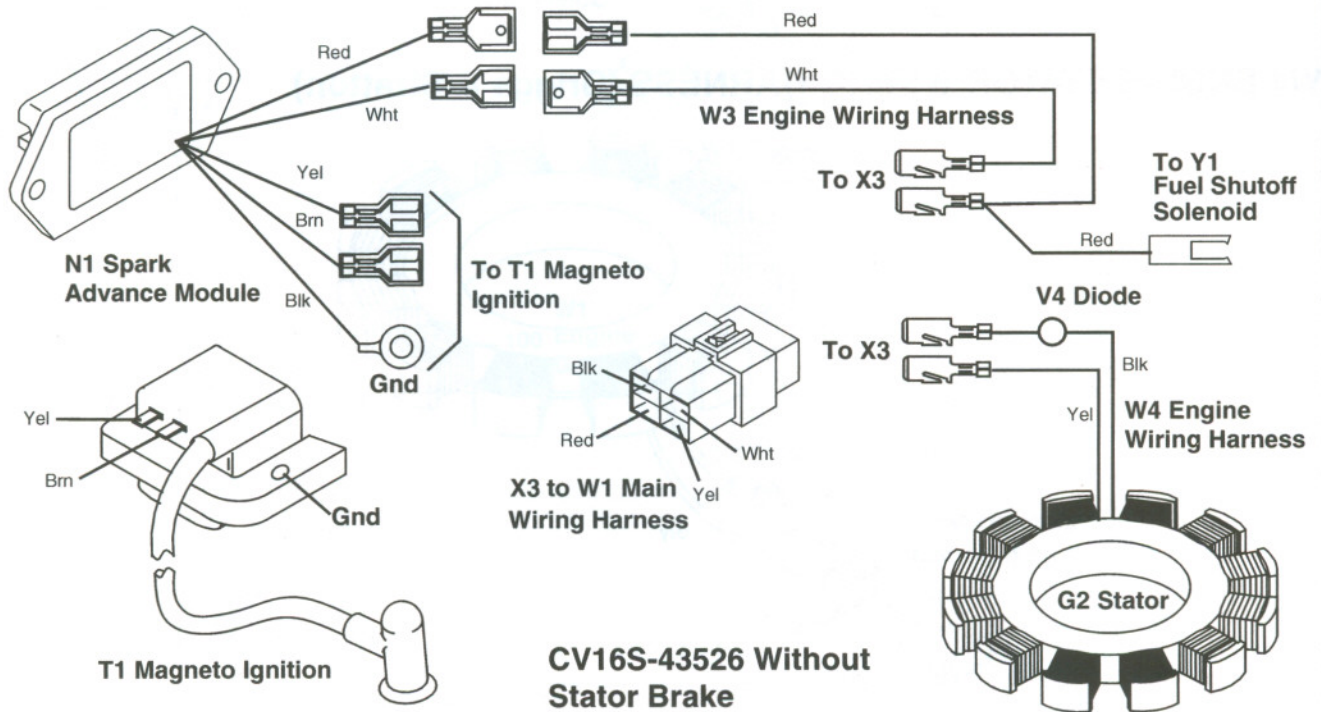

Y1 FUEL SHUTOFF SOLENOID (Kohler)

